

# APOLLO LED HIGH BAY

## SL923HBE INSTALLATION INSTRUCTIONS



### SAFETY WARNING READ CAREFULLY



- Be certain electrical power is OFF before and during installation and maintenance.

- Risk of fire or electric shock. Installation requires knowledge of electrical systems. For install by qualified electrician only. Do not attempt installation if not qualified.


- To prevent wiring damage or abrasion, do not expose wiring to edges of sheet metal or other sharp objects.

### INCLUDED COMPONENTS

I-Hook


Safety Carabiner

Locking Bolt

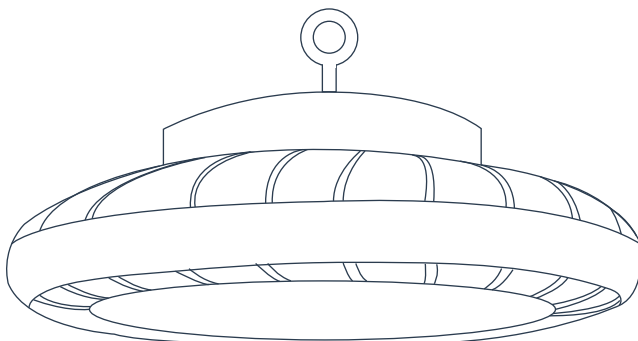


## INSTRUCTIONS


1. Turn off electrical power before attempting installation.

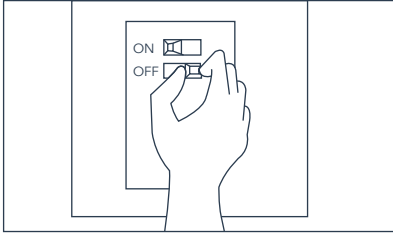


2. Screw in I-hook into fixture. Tighten locking bolt to secure I-hook.

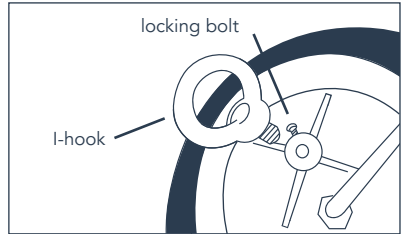

3. Attach high bay luminaire to hanging chain (not included). Mount hanging chain.

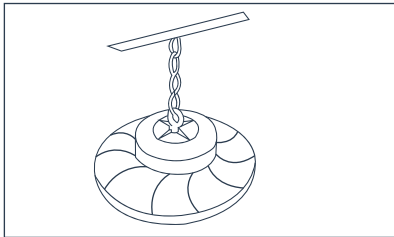

4. Attach safety carabiner.

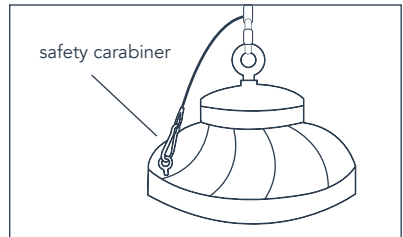

5. Wire high bay with the diagrams shown.

