# **HIGH BAY**

### Installation Guide



#### PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- · To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- · Disconnect product and allow cooling prior to servicing.
- · Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- · To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 50°C and to be horizontally mounted with the LEDs facing down.
- This product must be installed in accordance with the applicable installation code by a Person familiar with the construction and operation of the product and the hazards involved.
- In 75°c supply conductors.
- . This product is not available for several special environments, such as places with corrosive gas liquids or high pressure water vapor

## Installation


#### 1. Hook installation

- 1. Thread the power cord through the hole of hook and rotate the hook into 3/4" hole on fixture tightly.
- 2. Tighten the M4x8 screw beside the hook.
- 3. Connecting the wire according to the wiring diagram then installation is done.

# Sealing Kits M4x30mm Scre Attention: Locker End Up Accessory pocket


#### 2. Trunnion installation


- 1. Thread the power cord through the hole of hook and rotate the hook into 3/4" hole on fixture tightly.
- 2. Tighten the M4x8 screw beside the hook.
- 3. Secure the fixture to the mounting position, then adjust the desired angle, lock the angle adjustment screw.
- 4. Connecting the wire according to the wiring diagram then installation is done.

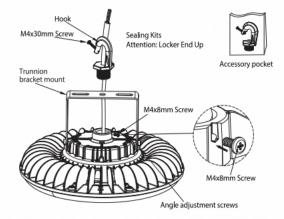

#### 3. Pendent mounting with 3/4" conduit(by others)

- 1. Make wire connections according to the wiring diagram.
- 2. Thread the led fixture onto the ¾" NPT conduit and secure the M4x8 screw.

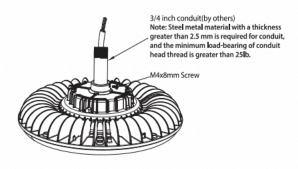

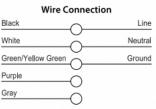

Note:Two dimming wires in the driver box